

---

Subject: Damir--help!

Posted by [Shane](#) on Sun, 22 Jan 2006 21:43:48 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I put in the parameters showing on your PSUD pic and it's not working for me. It's giving me a current is pulling voltage below zero error. What part of the parameters might I be missing? Also, I understand the current tap for 50mA and 2mA as the tube requirements would be about 104mA at the extreme end of operation, but what is the 60mA for?Thanks.

---