

---

Subject: Re: Question About Sony PS-LX220

Posted by [Grayson Lassar](#) on Thu, 03 Jun 2004 00:05:57 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

If you get no answer using Wayne's idea try this; Swap turntable's phono leads at amp, if problem switches channels, turntables connections at cartridge or elsewhere are bad or phono cable connection is bad or "loose'(solder). Phono cable may be bad (open)If problem doesn't change channels amp is probably at fault. Of course cartridge may be bad. Hope you solve problem. glassor Grayson Lassar

---