

---

Subject: SONY PS-LX250H

Posted by [lauren](#) on Sun, 26 Sep 2004 02:12:02 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

While trying to install this turntable, the surface just wouldn't turn. I finally realized the problem was with the belt, and I have read the other post, but it didn't solve my problem. the belt isn't hooked up to anything either than the motor pully. Does anyone know what else the belt is supposed to be hooked up to? Thanks.

---