

---

Subject: Turntable continually skips...help!

Posted by [Dan](#) on Mon, 17 Jan 2005 16:29:26 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I just bought a used turntable for myself. Got a new cartridge, put on a new belt, everything works fine...except I cannot figure out how to configure the anti-skating and the counterweight. It seems to always find a place on the record where it starts skipping and often will sound distorted when it does play. The anti-skating device isn't the kind I'm used to. Instead of a knob for the adjustment it's a piece of string tied to a weight that attaches to a bar coming out of the tonearm (if that makes any sense). The turntable is a Sansui FR-1080. If anyone has any advice on what to do I'd be very appreciative! Thank you!

---