

---

Subject: Sony PS-LX250H Turntable, Auto mechanism problem

Posted by [bpage](#) on Mon, 28 Mar 2005 10:41:40 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hello , i've recently bought a the PS-LX250H turntable from Sony, and the playing of records is just fine except for one problem... When pressing the "start" button to auto-play a record, the arm lifts, slides to the record, puts the stylus down normally, but 2 secs later, it picks up the stylus, and gets back into the off position and the turntable stops. What could be wrong? Thanks B. Page

---