

---

Subject: Re: Sony PS-LX250H Turntable, Auto mechanism problem  
Posted by [Manualblock](#) on Mon, 28 Mar 2005 12:07:29 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

You need to open the table and look underneath. There are two arms and a pair of gears that move the arm. When the arm stops too soon it is most likely that one of the gears is either mis-aligned or the rubber band that puts tension on the rotating gear arm is worn out. You can play with it but it probably needs someone who does this.

---