

---

Subject: Re: correct dc voltage for the Thorens 147 turntable  
Posted by [Manualblock](#) on Mon, 18 Apr 2005 17:41:56 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

16 volt. I would try Radio Shack; don't use that one.

---