

---

Subject: Re: correct dc voltage for the Thorens 147 turntable  
Posted by [Manualblock](#) on Wed, 20 Apr 2005 00:13:44 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

The unit is a 16v AC adapter. Be sure to get AC transformer; it looks like a wall-wart.

---