

---

Subject: Sony LX250H BIG Problem

Posted by [bpage](#) on Fri, 22 Apr 2005 06:09:10 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hey everyone, My Sony PS-LX250H turntable has a severe problem, well at least very annoying for auto play. When i press the "start" button, the arm moves normally up to the record, lowers the stylus, then plays it... But unusually 2-3 seconds after the stylus has touched the record, the arm just lifts back up again, gets back in its "off" position, and stops the turntable. Could anyone help? Thanks Bpage

---