

---

Subject: as the record plays my strobe doesnt show a steady mark

Posted by [sanspolanco](#) on Sat, 02 Jul 2005 10:39:41 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

does this always happen with belt drive turntables or is my turntable just crap? let me try to better describe my problem. whenever i play a record, the steady, non-moving marker flashed by my strobe starts to move as if i have slightly increased the speed. any suggestions?

---