
Subject: Re: Grados, ortophons, shures and AR turntable hum
Posted by [Manualblock](#) on Tue, 16 Aug 2005 22:15:23 GMT
[View Forum Message](#) <> [Reply to Message](#)

Say Russell; do you have both ground wires connected? and if so how does it do if you remove one of them? Have you tried swapping the positive leads on the cartridge pins? And hum is usually simple in Turntables; so are all the wires tight and have continuity? I have had that happen before, loose wire.
