

---

Subject: why won't my turntable play clear vinyl?

Posted by [scottyrobotty](#) on Sun, 09 Oct 2005 05:15:54 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

clear of even semi-transparent vinyl of any color. when i start it the arm will go over near the edge of the record and then it will stop and go back to it's rest. it's a sony ps-636.any clues on how i can override this safeguard? i can't find a sensor anywhere.

---