

---

Subject: Re: Turntable hum

Posted by [Anonymous](#) on Fri, 18 Nov 2005 00:24:11 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

There MIGHT be a problem with the cartridge, but I doubt it. I had another cartridge (Ortofon OM 10) and my turntable produced just the same noise. In fact, it does so even if the cartridge is not connected. I tried running my computer audio output and my tape player through the preamp, and it worked well. (They do not need that, but I did it for the sake of testing). Just a few minutes ago I thought about connecting the grounding wire to a power outlet's grounding post, but for that I need to modify the power and the grounding wires of my turntable. I can cut off the original plug, buy a 3-pin plug and safely connect the power wires and the grounding wire to it, after which it will be easy to use. Do you think it will work? Thanks.

---