

---

Subject: turntable spinning too fast or not at all  
Posted by [matt](#) on Mon, 19 Dec 2005 03:44:09 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

I have an Aiwa px-e860 fully automatic belt drive turntable. Yesterday I noticed while playing a record, all of a sudden it would speed up really fast and then slow back down, I thought maybe the belt had come loose, so I took off the platter and reattached the belt. Now the turntable either spins too fast, or won't spin at all, it keeps going back and forth. Also, the "start" and "cut" buttons for the arm don't seem to be working right either. Can someone please help me?

---