

---

Subject: Re: turntable channel problems

Posted by [ChristineS](#) on Mon, 09 Jan 2006 17:11:45 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

No, unfortunately no mono/stereo button, but I just went and fiddled with the RCA cables going into the turntable, and now it actually works. Why I don't know, but it almost sounds like I have a faulty connection somewhere, probably the inputs in the turntable. Sound reasonable? I think I'll listen to some music while it's still working, 'cause I don't know when it'll go on the fritz again!

---