

---

Subject: Turntable sounds tinny or metallic without much base

Posted by [Rod Cooper](#) on Tue, 10 Jan 2006 19:39:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Does any body have an idea what might cause this? Could it be that the needle is just worn out. I bought the turntable used but it plays nicely but just does not have much base sound to it. Please help me.

---