
Subject: Re: Turntable sounds tinny or metallic without much base
Posted by [Wayne Parham](#) on Wed, 11 Jan 2006 14:22:23 GMT
[View Forum Message](#) <> [Reply to Message](#)

Maybe you need a phono stage, or maybe the preamp is just set for the wrong type of input.
Confirm that the input settings of your preamp match the cartridge you're using.
