

---

Subject: Re: Problems with turntable's ground wires, help needed.

Posted by [Wayne Parham](#) on Mon, 06 Feb 2006 20:11:19 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Could it be that the grounds are connected together at the cartridge, and that you have the left channel's wires reversed? That would give this symptom, so you might check it out to see. Reverse the wires on the left output from the cartridge and see if it works.

---