

---

Subject: Sony PS-LX250H Stop Button

Posted by [Scott](#) on Wed, 29 Mar 2006 20:54:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I recently purchased a Sony PS-LX250H turntable as is, so there is no warranty. The Stop button isn't working. I've taken it apart and cannot figure out what the spring for this button is suppose to trigger to stop the turntable. Any help would be appreciated!

---