
Subject: Denon DP-51F - Can't keep tonearm on platter
Posted by [Andrew Kanter](#) on Mon, 19 Jun 2006 10:02:46 GMT
[View Forum Message](#) <> [Reply to Message](#)

Can anyone help? I recently acquired a Denon DP-51F which is in excellent condition, but the tonearm glides across the platter. I've adjusted just about every knob that I can think of per the instructions and the service manual to no effect. Any ideas? Perhaps something is loose inside?
