

---

Subject: Re: very low volume comes from the turntable

Posted by [Tre'](#) on Sat, 29 Jul 2006 15:18:34 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

A phono cartridge output voltage is very low. The music cut into the grooves of a record is lacking in the bass and boosted in the treble. A phono pre-amp boosts the bass and cuts the treble and provides a lot of gain. I took a look at the mixer you use and it has 3 phono inputs, that is three channels of phono pre-amplifiers. <http://www.soundandlightcity.co.za/DJ%20Mixers.htm> Your turntables should only work when plugged into the "phono" inputs on the mixer. If one of your turntables worked and now it doesn't, I would think there is a connection problem with that turntable. Sorry I couldn't help more. Tre'

---