

---

Subject: Technics 1200s audio from 1 channel only  
Posted by [Shortcut77](#) on Sun, 22 Oct 2006 13:51:42 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Hey, Can anyone tell me how to safely fix my turntable if audio is only coming out of the left channel? I think the wiring on the turntable itself disconnected. Thanks.

---