

---

Subject: 5 Checkpoints

Posted by [Dewald Visser](#) on Mon, 06 Nov 2006 06:29:02 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I have 'heard' this many times before. 1. Try grounding the amp & turntable at the power receptical. 2. Check and see if the turntable motor is grounded. 3. Your receiver's phono-stage may be a bit dodgy... 4. Check that there are no fluorescent lights nearby that is switched on while you are listening... 5. Pro-Ject machines are known for their humming & buzzing... Best regards, Dewald Visser

---