

---

Subject: Re: Ground or bad connection

Posted by [Bill Agee](#) on Thu, 07 Dec 2006 01:30:05 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Where exactly does that ground wire connect to the tonearm? It may be that it has come loose from the arm. Try this: Remove the tonearm ground connection from the chassis where it is connected with the screw. How has the noise changed now? Use another piece of wire, just for a test, and temporarily connect it from the tonearm to the chassis. How has the noise changed now? Bill

---