Subject: unstable platter Posted by Philippe on Sat, 06 Jan 2007 14:03:39 GMT

View Forum Message <> Reply to Message

Just bought a Technics SL 1210 M5G, after putting the platter on the pin, the platter is not stable.. it has a bit of movement to it. I can play records, but scratching is an issue.. did I assemble it wrong? The service center here says that all models of this are like that. Are they sending me off without doing anything is there anything I can do?