
Subject: Sony LX250H turntable
Posted by [marie riley](#) on Sun, 04 Feb 2007 22:55:03 GMT
[View Forum Message](#) <> [Reply to Message](#)

The turntable suddenly will not turn. It is a year old and infrequently used. We took off the actual turntable and replaced the rubber band as instructed, but it still won't turn. What troubleshooting should we try?
