Subject: Autoreturns too soon Posted by DKeller on Thu, 22 Feb 2007 01:44:26 GMT

View Forum Message <> Reply to Message

This is my first time posting, but I was wondering if anyone could help me figure out how to adjust the autoreturn position on my Fisher MT-6420 turntable. It's a direct-drive (if that makes any difference). It plays fine, but the autoreturn engages before the end of the record. Any ideas? Thanks.