

---

Subject: How to replace a platter?

Posted by [Furste](#) on Wed, 18 Apr 2007 01:48:34 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Hi, I recently purchased a Sony PS-LX250H (it's my first turntable; it seemed like a good entry point). I was able to get a steal for it, but presumably because it's missing "the metal tray and mat" as the seller said. Am I a total idiot? Is there any reasonable way to fix this and get the machine to be usable, or am I just SOL? Thanks in advance. Furste

---