

---

Subject: Re: Denon DP-300F

Posted by [Michael M](#) on Thu, 26 Apr 2007 23:57:30 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

It seems unlikely that it's specifically the stylus, just because I've actually tried another stylus and the problem continued. is it possible the wiring/other connections between the stylus and tonearm are damaged?

---