

---

Subject: Re: Issue: Unwanted Mono Playback

Posted by [hurdy\\_gurdyman](#) on Tue, 14 Aug 2007 13:47:44 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Something is wrong either at the cartridge wiring in the headshell, or possibly where the tonearm wires connect to the output sockets. I suspect that the Left and Right wires are wired in such a way to do as you describe. Double check that the cartridge is wired correctly, and no strands of wire are sticking out. Next, if you have a test meter, check that each wire has proper continuity by testing from the headshell end and at the output connector end. Make sure the red and white wires are the +, or center, of each output connector. If this doesn't find the problem, re-post and we'll think of something else. Dave

---