
Subject: Re: sony ps-lx350h question
Posted by [Wayne Parham](#) on Fri, 28 Sep 2007 13:46:15 GMT
[View Forum Message](#) <> [Reply to Message](#)

Sounds like the cartridges have different output levels. You might need a phono stage.
Phono Stage posts
