

---

Subject: CROSLEY KEEPSAKE TURNTABLE STOPPED SPINNING

Posted by [BETTY](#) on Tue, 03 Jun 2008 11:38:03 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I'VE HAD MY RECORD PLAYER FOR 5 MONTHS NOW, I USE IT DAILY, WHEN I WENT TO LISTEN TO A RECORD EARLIER IT WOULD NOT WORK. THE MOTOR IS NOT MOVING, THERE IS NO SOUND WHEN I RUB THE NEEDLE, THE BELT IS NOT LOOSE OR BROKEN, WHAT COULD BE THE PROBLEM? IT WAS WORKING FINE YESTERDAY..

---