

---

Subject: Re: Garrard 42 Turntable

Posted by [Wayne Parham](#) on Tue, 07 Apr 2009 16:22:39 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Make sure the ground is connected and all the connectors are clean and tight. Sometimes an oxidized connector will cause that. Otherwise, if it isn't a connection or a wire, then it's the cartridge.

---