

---

Subject: Need help w/ Pioneer PL-L70

Posted by [VinylVandel](#) on Thu, 14 May 2009 21:54:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I just bought a Pioneer PL-L70 Linear Direct Drive Programmable Turntable, when I power it on the turntable moves and the needle drops from it's lock position but it won't move to the record. I heard that they need adjusting from time to time but I have no clue where to find this info. Search engines are worthless nowadays. Anyone know how to take care of this issue?

---