

---

Subject: TASCAM 424

Posted by [MIXMAN](#) on Wed, 04 Aug 2004 16:51:48 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Greetings from the Abungas! Track 2 on my TASCAM 424 is going dead or something. I've tried cleaning it to no avail. After recording, the track is either real quiet or not there at all. Could it need alignment or something? Thanks in advance, MIXMAN

---