

---

Subject: Sony TC-650 reel deck brakes

Posted by [Larry Sturtz](#) on Wed, 21 Feb 2007 00:19:03 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Subject deck works well except when stopping in mid-rewind. Left hand takeup reel stops smoothly but right hand reel continues in motion unspooling 12+ inches of tape before stopping. When the tensioner resets it usually, but not always, breaks the tape. Have cleaned reel hub and inspected brake and cleaned brake pads. Any direction on how to fix?

---