

---

Subject: Re: Sony TC-650

Posted by [Wayne Parham](#) on Sun, 08 Apr 2007 15:19:36 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Sounds like you may need to replace the tape head. Is the tape path straight? If the pinch roller isn't causing the tape to contact the head uniformly, that can cause it too.

---