

---

Subject: Sony TC650

Posted by [Crash](#) on Sun, 05 Oct 2008 05:04:04 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I have a Sony TC650 and it wants to run at 7.5ips only. When I hit the switch it stays at 7.5ips. Does anyone know which components on the control board should be checked? Without a manual it would help to know.

---