

---

Subject: Discman problem

Posted by [Adrian Mack](#) on Sat, 13 Mar 2004 12:04:19 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Just bought a cheapy AU\$35 CD discman. the CD skips even if you tap the discman only gently and it also skips from walking momentum too. I've been told that there must be no buffer in it - just wondering if there is any tricks or tweaks I could do to make it not skip? I dont consider it a 'portable cd player' if you cant move it around without skipping!

---