

---

Subject: Re: split impedance

Posted by [Bill Martinelli](#) on Sun, 05 Sep 2004 15:42:13 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Please explain how the amplifier can see or sense individual components past the passive crossover? I always thought the amp would only see the total load and impedance that is given at the point of entry, the crossover.

---