

---

Subject: Confused about sensitivity information

Posted by [GarMan](#) on Wed, 14 Apr 2004 01:33:19 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Now I'm really confused about the sensitivity of the Eminence drivers. I've always gone by the graph at the bottom of the datasheet. But comparing the graph with the data on the Sensitivity Guide, they seem completely different. What gives? Am I interpreting the graph incorrectly?Gar.

---