
Subject: Re: How do I measure the Le of a speaker?

Posted by [Tre'](#) on Fri, 07 Apr 2006 04:07:19 GMT

[View Forum Message](#) <> [Reply to Message](#)

I found it. $Le = (\sqrt{3} \cdot Re) / (2 \cdot \pi \cdot f_x)$ I have to find Re and fx first, but the article shows how to do that. Thanks...Tre'

Speaker how to
