
Subject: Monkey Wards Airline console

Posted by [dlrepp](#) on Fri, 05 May 2006 01:45:31 GMT

[View Forum Message](#) <> [Reply to Message](#)

Hi I bought this console at a garage sale for \$3.00. It works pretty well. The turntable will do 16, 33, 45, and 78 rpms. It has a flip cartridge. The radio pulls in some stations that my more modern tuners won't. It has a pair of rca inputs on the back for my cd player. It also has 2 rca speaker outs in the back. I bought it originally because it has a tube amp and tube pre amp. Which brings me to my problem. The speaker outs are not balanced. I have to tune the balance knob to 9 o'clock to get the right sounstage. I tried switching the 2 tubes on the amp and it still isn't right. Any suggestions as to my next step? All sources have the imbalance which suggests there is a problem with the pre amp. I am a plug and play type person so anything too technical will go in one ear and out the other. Thanks for any help someone can give me. Dan
