

---

Subject: marantz 2325

Posted by [joe nallie](#) on Tue, 29 Jun 2004 15:33:15 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Need a big favor from one of your knowledgeable a/v experts. I have an old Marantz 2325 Receiver (30 years old) and seven a/v devices to run thru it. cd-r, vcr, video disc, phono, dvd, dig cable box and tv. I'm determined to use the 2325 because it sounds so good and clean. I need assistance in connecting it all together with the objectives: 1. running all audio thru receiver 2. recording from video disc to VCR 3. recording from cable tv to VCR 4. recording phono to CD-R. The 2325 receiver has stereo inputs: phono, aux, Tape 1, Tape 2. It has stereo outputs @ tape 1&2. There are no Video input/outputs. Tape outputs also carry the phono and aux audio output. The Video disc has in/out coax only. VCR has in/out coax and stereo input/output and video in/out. The phono has audio output only. The DVD has stereo and video inputs/outputs. The CD burner has stereo inputs/outputs. The Cable box has stereo inputs/outputs and video in/out and of course, coax in/outs. The TV has 3 inputs: Audio(mono), video and coax. No outputs. Whew, it is just blowing my mind.. I do have a 3 way switch box with 3 stereo a/v inputs and one output. Thanks for any suggestions... Joe Nallie 141 Norwood Lumberton TX 77657 800 835 3247

---