

---

Subject: Lenco 35

Posted by [James@sideways-on.freeseer](#) on Mon, 20 Dec 2004 10:44:10 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Excuse my total ignorance! I've just bought a Lenco 35, and the turntable will only turn when the volume knob is switched to zero (rather than -/+). Any ideas what the problem could be?

---