

---

Subject: Re: Non Working gear  
Posted by [Wayne Parham](#) on Sun, 15 Oct 2006 15:09:54 GMT  
[View Forum Message](#) <> [Reply to Message](#)

---

Check the simple stuff first. Check the filaments on each tube and make sure they're not open.  
Make sure you have AC output from the power transformers.

---