

---

Subject: Re: Elizabethan LZ 30

Posted by [Wayne Parham](#) on Sun, 20 Apr 2008 04:14:47 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

Does the pinch roller turn? How about the take up reel? One of the most common problems with old tape decks is the pinch roller gets gummy or wears out. Then the tape speed is off, either drags or doesn't play at all. If it will play, it will often eat tapes because the tape sticks to the roller and is carried around rather than passing through.

---