

---

Subject: Video Toaster V3

Posted by [Art Tra Studio](#) on Mon, 23 Aug 2004 01:33:57 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

First post here. I'm loading video from my Sony cam and it seems like it is taking up too much disk space. Is this normal? I thought 120Gb would hold one hour of digital video. Can anyone explain this to me? Do I have a wrong setting or something?

<http://www.newtek.com/products/vt/live/index.html>

---