

---

Subject: Theater 4 problems

Posted by [newsjeff](#) on Fri, 05 Mar 2004 23:25:51 GMT

[View Forum Message](#) <> [Reply to Message](#)

---

I finally got my second Pi Theater 4 kit from Wayne. The first kit/speaker sounds great. When I installed the components in the second speaker cabinet, the bass in the Delta 15 was not there. I could hear some sound, but barley. I re-checked the polarity in the hookup wires. They are fine. Everything is connected correctly. I thought, OK, I'll just switch the Delta 15s from the left to the right speaker and see if the problem was with either the speaker, one of the cables, the crossover, whatever. Now I have more problems. I used T-nuts and machine screws to attach the Deltas to the cabinets. I cannot, for the life of me, get the last screw out of the T-nut on one of the speakers. At this point, I think I will have to use a hacksaw and cut the bolt. In the meantime, I have bent the connections on one of the Delta 15s, too. And the lack of bass is still bothering me. Any suggestions out there?

---