
Subject: Yeap, blown fuse

Posted by [colinhester](#) on Tue, 01 Mar 2005 02:32:42 GMT

[View Forum Message](#) <> [Reply to Message](#)

Fuse in the DVM was gone. I remeasured from plate to ground and adjusted to 15mA; the voltage was 100VDC both channels. When adjusted to 130VDC as before the current was around 50mA. Staying at 15mA and 100VDC. And yes, the LEDs went out when measuring the current this time. Thanks a bunch.....Colin
